

### ! CAUTION

- All wiring should be done by a licensed electrician in accordance with state codes, local codes, and National Electric Code (NEC) standards or International Electrotechnical Commission (IEC) standards.
- Improper installation may result in serious injury and void warranty.
- Contains parts and assemblies susceptible to damage by electrostatic discharge (ESD).
- Surge protective devices should be utilized for fixtures installed in environments subject to power surges outside the specified operating parameters.

### Wiring

The standard fixture is supplied with a pigtail.

**Note:** For 120-277V models, the blue and white dimming leads should be capped when not in use.

Description	120-277V	277-480V
ground	green/yellow	green
hot	brown	black
common	blue	white
dim (-)	white	n/a
dim (+)	blue	n/a

### Mounting

Each fixture is provided with mounting hardware. Prior to mounting, ensure structure and mounting cable/chain are capable of supporting the fixture's weight:

Ascend LO (100W): 11 lbs (5.0 kg)

Ascend HI (230W): 19 lbs (8.6 kg)

### Maintenance

Periodic maintenance and cleaning may be required to keep light fixture in peak operating condition. Buildup of dirt and/or debris can diminish performance or lead to premature failure and may void the warranty.

1. Inspect fixture monthly (or more frequently if conditions require) for dirt and debris build up on lenses and between fins of heatsink. Wash down with water as needed.
2. Inspect fasteners, and verify cord grips are tight. Retighten as needed.

