

## ! CAUTION

- All wiring should be done by a licensed electrician in accordance with state codes, local codes, and National Electrical Code (NEC) or International Electric Commission (IEC) standards.
- Improper installation may result in serious injury and void warranty.
- Contains parts and assemblies susceptible to damage by electrostatic discharge (ESD).
- If the luminaire's external cable is damaged, turn the fixture off, remove from equipment and replace with a new luminaire to avoid a hazard or injury.
- The light source of this luminaire is not replaceable. When the light source reaches its end of life, the whole luminaire shall be replaced.
- Fixture is suitable for outdoor use.

## Wiring


The standard fixture is supplied with a molded Deutsch connector.

**Note:** When inserting female end of Deutsch connector into male end, ensure you hear or feel the Deutsch connector click and engage.

Black is negative (-) and red is positive (+).

Fixture	Fixture Weight	Max Projection Area
HI Alert	7.0 lb (3.2 kg)	0.33 ft <sup>2</sup> (0.031 m <sup>2</sup> )

**Figure 1: Wiring Diagram**

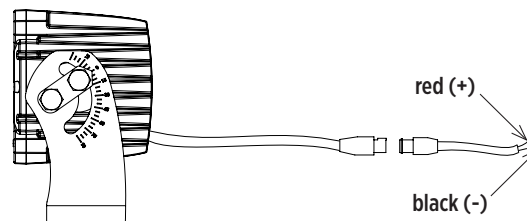


## Mounting


1. The Master HI Alert Series comes standard with M12 mounting hardware (bolt, washer, nyloc nut) for securing the fixture to a mounting surface.
2. For high shock and high vibration applications, Phoenix recommends using two (2) mounting bolts when installing the MST-HI Alert fixture to properly support the harp and prevent fixture rotation.

**Note:** The fixture can be surfaced mounted in any orientation on stationary or mobile equipment. Once secured to mounting surface, aim as desired and securely tighten M8 hex head screws on both sides of mounting harp.

**Figure 2: Exploded View of MST-HI Alert Mounting Hardware**

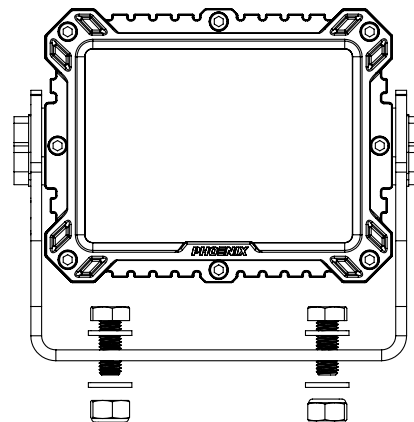

**Figure 3: MST-HI Alert Mounting Dimensions**

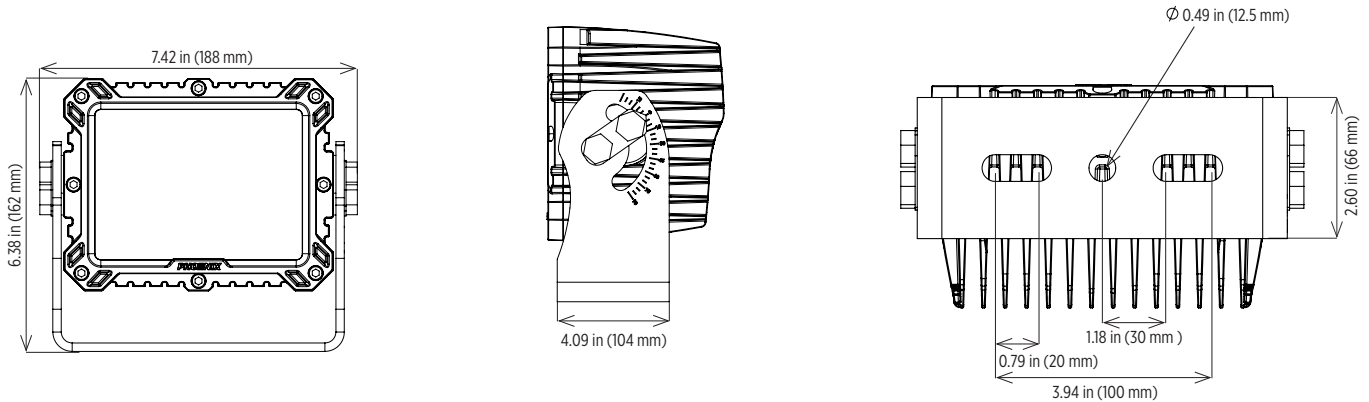

## Maintenance

Periodic maintenance and cleaning are required to keep light fixture in peak operating condition. Buildup of dirt and/or debris on fixture will diminish performance, lead to premature failure and void warranty.

Inspect fixture monthly for build up of dirt and debris on lens and between fins of heatsink. Wash fixture with clean water and a soft towel. Do not use an abrasive cleaner or chemicals as this could cause scratches or other damage to the lens.

**Note:** The lens coating is designed to reduce buildup and minimize washdown time, but regular inspection and maintenance is still recommended to maximize fixture performance and fixture life.