

! CAUTION


- All wiring should be done by a licensed electrician in accordance with state codes, local codes, and National Electric Code (NEC) standards or International Electrotechnical Commission (IEC) standards.
- Improper installation may result in serious injury and void warranty.
- Contains parts and assemblies susceptible to damage by electrostatic discharge (ESD).
- When using luminaires, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury.

Included in the Cube-Light Wire Guard Kit: wire guard and four (4) M4 screws.

Installation

1. Remove four (4) M4 x 10mm screws, securing the lens to the fixture. Discard these screws as they are not long enough to secure the wire guard to the fixture.
2. Insert four (4) M4 x 12mm screws into the wire guard, then the lens. Refer to Figure 1.
3. Torque screws to 15 inch-pounds.

Figure 1

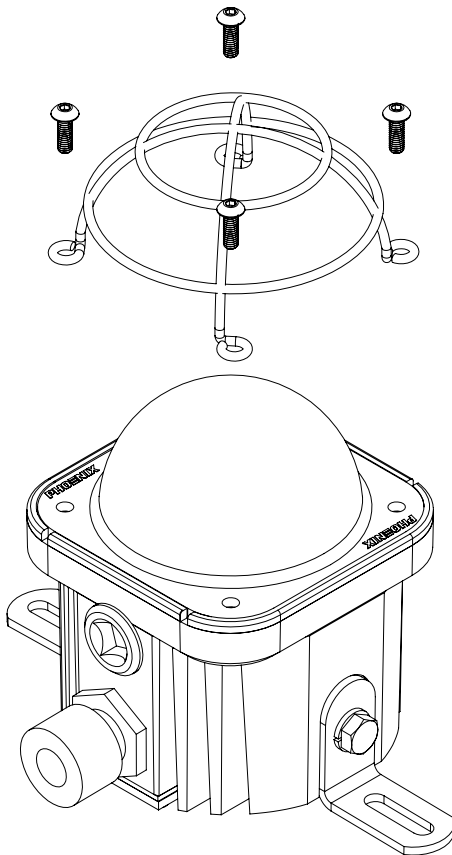

Product design and specifications are subject to change without notice.

